

Technical Specification

Product fiche

Trademark	Blaupunkt	
Model ID	236/207M-GB-3B-EGPX 236/207M-GB-3B-EGBQPX	236/207M-GB-3B-EGDPX 236/207M-GB-3B-EGDPSX (Models with inbuilt DVD player)
Energy efficiency class	A	
Visible screen size (diagonal)	60 cm / 23.6 Inches	
On mode power consumption	25.0 W	
Annual energy consumption *1	37 kWh	
Standby power consumption *2	<0.50 W	
Off mode power consumption	0 W	
Screen resolution	1366 (H) x 768 (V)	
*1: Energy consumption XYZ kWh per year, based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.		
*2: When the TV is turned off with the remote control/standby button and no function is active.		

Additional Technical Information

	236/207M-GB-3B-EGPX 236/207M-GB-3B-EGBQPX	236/207M-GB-3B-EGDPX 236/207M-GB-3B-EGDPSX (Models with inbuilt DVD player)
RF	75 ohm Antenna / Analog / DVB/ Satellite*	
Inputs	2 x HDMI, 2 x USB, 1 x SCART, 1 x RJ45 LAN/Ethernet, 1 x Mini Composite/Video & L/R Audio shared for Composite/Video & Component/YPbPr, 1 x Mini Component/YPbPr	
Sound Outputs	1 x 3.5mm Headphone, 1 x Digital Optical Audio Out	
Speaker / Amplifier Watts (RMS)	2 x 5 / 2 x 3	
Voltage and power consumption	AC 220V~240V; 50Hz 25/40W (ecomode/max)	AC 220V~240V; 50Hz 25/50W (ecomode/max)
Dimensions including stand (mm)	560W x 386H x 140D	
Net weight (Kgs)	4.1	4.6
Wall Mounting	VESA 100 x 100 (mm)	

*The satellite input is for the 236/207M-GB-3B-EGBQPX model only.



Quick Start Set Up Guide

For information on using the TV's features, please refer to the operating Instructions.

Model Numbers

236/207M-GB-3B-EGPX
236/207M-GB-3B-EGBQPX
236/207M-GB-3B-EGDPX
236/207M-GB-3B-EGDPSX



Quick & easy guide for setting up your TV

What is included in the box

Using the remote control

Setting up the TV for the first time - including attaching the stand

Connecting other devices to the Television

Need help setting up or using your TV?

Please contact the UK & ROI Helpline*

Telephone UK 0330 024 0802 or ROI 01443 3940

Online support at: www.umc-uk.co.uk

Email support at: service@umc-uk.co.uk

*Calls to 0330 numbers are charged at standard call rates and are included as part of any bundled minutes with your phone provider.

Calls to the ROI number are charged at the local call rate.

The telephone opening hours are Monday to Friday 8.30am to 6pm, Saturday 9am – 5pm.

Bank Holidays - 10am to 4pm

Closed Christmas and New Years day



What is included in the box

- Accessories included with this TV are the following accessories
- 1 x Quick Start Guide
 - 1 x Stand installation pack
 - 1 x Safety Leaflet
 - 1 x Remote Control and 2 x AAA Batteries

Additional Accessories

Should you wish to connect older/analogue devices to your television, you can purchase the necessary cables either from your retailer or at www.umc-uk.co.uk/cables

Mini Composite/AV Cable
Required if you wish to connect a device with AV/Composite/CBS output to the TV's Mini AV Input

Mini YPbPr Cable
Required if you wish to connect a device with YPbPr/Component output to the TV's Mini YPbPr Input



RF Cable



Mini YPbPr Cable



Mini Composite/AV Cable

Freeview HD
To receive Freeview channels, in particular Freeview HD channels, you will need a Digital TV aerial and be in a good Freeview coverage area. You can check coverage for your postcode at www.freeview.co.uk. Please note that any Freeview HD channels found during tuning will be placed in channel positions above 100. For example, 101 (BBC1 HD), 102 (BBC2 HD) etc.

Please save your box/packaging as you will need this in the event of warranty/service repair or support. We are unable to carry out warranty/service if you are unable to package it correctly. The safest way to package your item in the event of warranty/service repair is in its original box/packaging.

Using the remote control



Sky remote code
If you wish to use your Sky remote to operate the TV's basic functions, you will need a Sky remote control (Revision 9 or later) and you will need to program it with the code 2134. If you wish to use your Sky Q remote to operate the TV's basic functions, you will need to program it with the code 4170.

- 1 ON/OFF** - Switch on the TV when in standby or vice versa.
- 2 MUTE** - Mute the sound or vice versa.
- 3 NUMBER BUTTONS** - 0-9 to select a TV channel directly. TV GUIDE - Opens the 7 day TV guide (digital TV mode). - To return to the previous channel viewed.
- 4 VOL (+/-)** - To increase/decrease the sound level. PICTURE - Scrolls through picture mode options. SOUND - Scrolls through sound mode options. SOURCE - To display the input/source menu. CH (+/-) - To increase or decrease the channel being watched. MENU - To display OSD menu. EXIT - To exit all menus. (A/1/OK) - Allows you to navigate the on-screen menus and adjust the system settings to your preference. BACK - To go back a previous step. FAV - To display favourites menu.
- 5 INFO** - Press once for now/next channel information. - Press twice for information about the current programme. TEXT - To enter/exit text. SUBTITLE - To switch the dialogue at the bottom of the screen (on/off). TV - To switch to Digital Channels. YOUTUBE - Access the Youtube App. NETFLIX - Access the Netflix App. SMART - Access the Blaupunkt Smart Portal. RECORD - Access the USB record function. RECALL - Opens the list of what has been previously recorded. REPEAT - To restart the current chapter. GO TO - To go to a specific chapter. A-B - Press once to set point, press a second time to return to point. ANGLE - Select different angle of DVD. REPEAT - To repeat playback.

Setting up the TV set for the first time

To obtain a copy of your Operating Instructions, please go to: www.umc-uk.co.uk/instruction-manuals/blaupunkt


1 Fitting the stand

For stand installation, there are two types of screws provided as shown below. To complete the stand installation you will require a cross head screw driver.


Place the TV set on a flat and clean surface with the panel facing downwards to avoid damage.

 **3 x M (4x12)**


 **4 x ST (4x12)**
Used for attaching the stand base to the stand neck (fig.3)

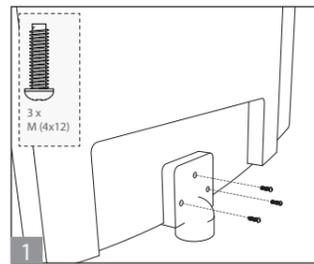

1 Attach the stand neck to the rear of the TV set using the 3 x M(4x12) screws.

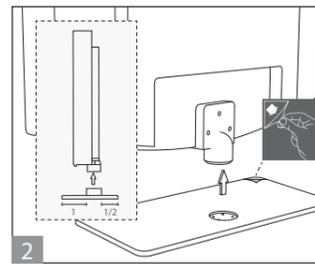

2 Peel off the protective plastic cover then attach the stand base to the neck.

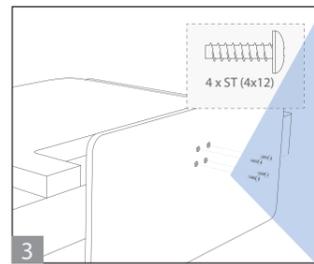

3 Secure the base to the neck by using the 4 x ST(4x12) screws provided.

HELPFUL ADVICE FOR FIRST TIME STAND INSTALLATION

When securing the self-tapping screw/s into the base of the stand (on first installation) the screw/s will be naturally tight as they create a thread in the plastic of the stand neck in order to support a TV of this size.


a) Ensure the cross head screw driver tip fits correctly into the head of the screw and that it is not too big or small.

b) Screw in all screws individually and partially before tightening all of the screws fully.


c) If they become very tight try loosening them slightly and then re-tightening them once again as this will continue the process of creating the thread for the screws.

Button layout

- 1 Stop/Eject Disc For DVD models only
- 2 Play/Pause Disc For DVD models only
- 3 Volume up and menu right
- 4 Volume down and menu left
- 5 Programme/Channel up and menu up
- 6 Programme/Channel down and menu down
- 7 Displays Menu/OSD
- 8 Displays the input source menu
- 9 Standby Power On/Off

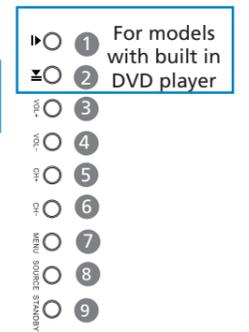


2 Installing batteries

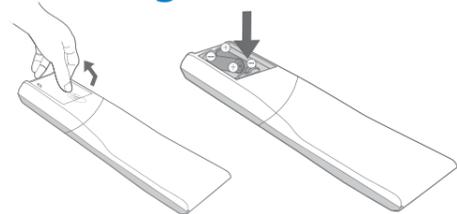


Remove the battery cover from the rear of the remote control and insert the AAA batteries which are supplied in the accessory pack. Ensure that the polarity of the batteries is as shown in the battery compartment. Replace the battery cover. The remote control is ready for use.

3 Connecting your set

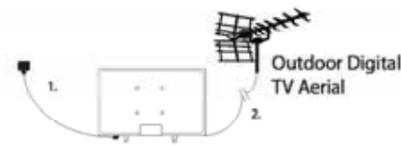

- 1) Connect the TV to your power socket.
- 2) If you wish to use the TV to receive Freeview/Saorview channels, connect the RF input from the TV to your outdoor Digital TV aerial. If you do not wish to receive Freeview/Saorview, skip this step.

4 Locating the Power Switch

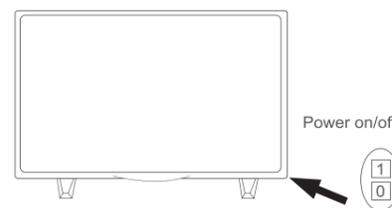

Switch on the television using the power on/off switch located on the TV. The standby light will show.

Wall Mounting the TV


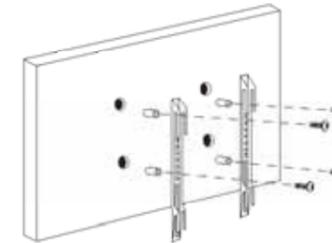


Image for illustration only.

1. Remove the four screws that are supplied in the wall mounting holes.
2. The wall mount can now be easily attached to the mounting holes on the rear of the TV.
3. Install the wall mounting bracket to the television as advised by the bracket manufacturer.

The picture shows the use of spacers, which are not applicable to all sets/installations.

5 First time installation

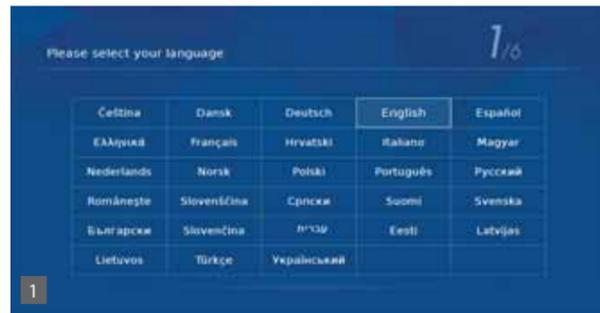


1. Languages
Select your preferred on screen display language. This will change the language in which the menus and associated information is displayed in. When set up has been completed, this can be changed by selecting Menu > Settings > Language



2. Country Selection
Select the correct flag for the country in which the set will be used in. This will enable the set to correctly install the functions applicable in the country of use.



3. Network setup You can connect the TV to your broadband router or wireless network in order to take advantage of the Smart functions. If you connect the TV to your router using an Ethernet cable (recommended) this step will be skipped. Follow the on screen prompts to connect to your wireless network. You can set up the Network connection later in the network menu.

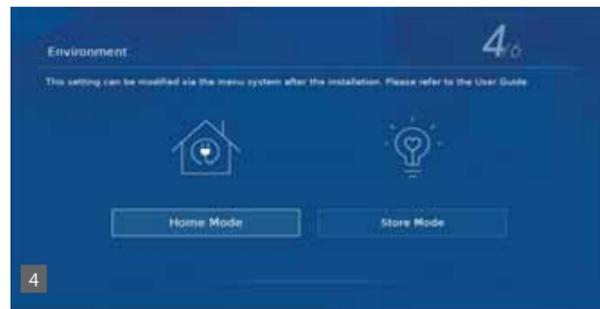

4. Environment of Use
Home Mode: For normal use, by default it is set to a power saving mode which reduces the energy used by up to 25% (by reducing the power to the LED/LCD panel). This can be changed in the picture mode settings.

NOTE: In Home Mode, the TV will switch itself to the standby mode after 4 hours in the event that the buttons on the remote control or TV set are not used.

Store Mode: For store display use. The picture is adjusted to optimum settings. The store demonstration will appear on the screen automatically after two minutes.




5. TV Installation – Audio.
Depending on how you use / install your TV, select the appropriate setting. The sound settings on the TV will adjust to suit the type of installation.



6. Default Source
Select the source which you use the most. If Digital TV (Freeview) is chosen, then at the next step, the set will tune in and default to Digital TV (Freeview). If one of the other sources is selected, then the set will not tune in at this stage and default to that input. If it is required to tune the set in later, this can be achieved by selecting Menu > Channels

Connectivity

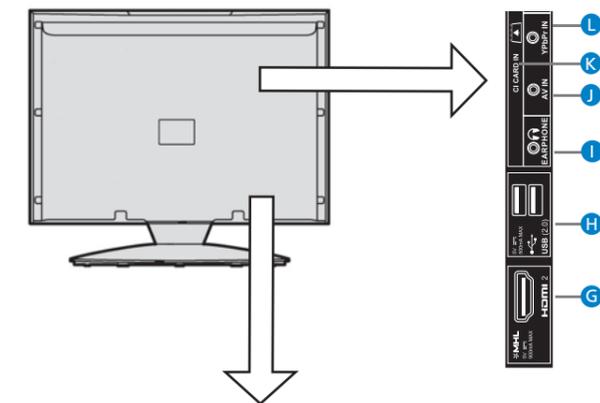

Label	Port Type	Function
A	ETHERNET/LAN*	Network Connection
B	HDMI 1 (ARC)	HDMI input
C	SCART	SCART input
D	SAT IN**	Satellite input
E	RF IN	RF / TV Aerial Input
F	Optical Digital Audio	Digital Audio output
G	HDMI 2***	HDMI input
H	2 x USB	USB port
I	Earphone	Earphone Input
J	AV IN	Audio Video Input
K	CI CARD IN	Common interface module
L	YPbPr	HD in

* The Ethernet/LAN port is used for Freeview HD services and smart functions.

**The Satellite input is not used in the UK.

***HDMI 2 (MHL Port) - MHL is a wired solution that allows you to access the media from your phone or tablet onto the big screen in the highest quality. By connecting an MHL cable (sold separately) from your mobile device and into your TV you can playback all your videos, games and photographs directly onto your TV. MHL simply mirrors the screen of your mobile device so will work with all applications, whilst connected it will also charge your device too.