



Technical Specification

BN24H1012EKB	
Energy Efficiency Class (SDR)	F
Power consumption (SDR)	21 W
Screen resolution (pixels)	1366 x 768
Screen Size (diagonal)	60 cm / 24 inches
RF	75 ohm Antenna / Analog / DVB / Satellite
Inputs	2 x HDMI, 1 x USB, 1 x AV IN - Composite/Video & L/R audio input
Sound Outputs	1 x 3.5mm Headphone/Audio out, 1 x Coaxial Audio Out
Speaker / Amplifier Watts (RMS)	2 x 3W
Voltage and power consumption	100-240V 50 / 60Hz 21/40W (ecomode/max) (<0,5W in Standby)
Dimensions including stand (mm)	549W x 365H x 156D
Net weight (Kgs)	2.2
Wall Mounting	VESA 75 x 75 (mm)

HDMI

The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Dolby Audio

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.



Quick Start Set Up Guide

For information on using the TV's features, please refer to the operating Instructions.

Model Numbers
BN24H1012EKB

Register For Your
Manufacturers Warranty
 Register your manufacturers guarantee online within 14 days of purchase at www.registertv.co.uk/blaupunkt

Quick & easy guide for setting up your TV

What is included in the box

Using the remote control

Setting up the TV for the first time - including attaching the stand

Connecting other devices to the Television

Need help setting up or using your TV?

Please contact the UK & ROI Helpline*

Telephone UK 0330 024 0802 or ROI 01443 3940

Online support at: www.umc-uk.co.uk

Email support at: service@umc-uk.co.uk

*Calls to 0330 numbers are charged at standard call rates and are included as part of any bundled minutes with your phone provider. Calls to the ROI number are charged at the local call rate. The telephone opening hours are:

Monday to Friday: 8.30am – 6pm
 Saturday: 9am – 5pm
 Bank Holidays: 10am – 4pm

Closed Christmas and New Years day.

 


What is included in the box

Using the remote control

Please save your box/packaging as you will need this in the event of warranty/service repair or support. We are unable to carry out warranty/service if you are unable to package it correctly. The safest way to package your item in the event of warranty/service repair is in its original box/packaging.

- Accessories**
 Included with this TV are the following accessories:
- 1 x Quick Start Guide
 - 1 x Remote Control and 2 x AAA Batteries
 - 1 x Safety Leaflet
 - 1 x Stand Installation Pack
 - 2 x Screws
 - 1 x Left + 1 x Right Stand Foot
- Additional Accessories**
 If you don't have the RF cable shown below, then you can purchase one from www.umc-uk.co.uk/cables if you are intending to connect your TV to an RF socket in order to receive Freeview you will need this cable.
- 1 x RF Cable

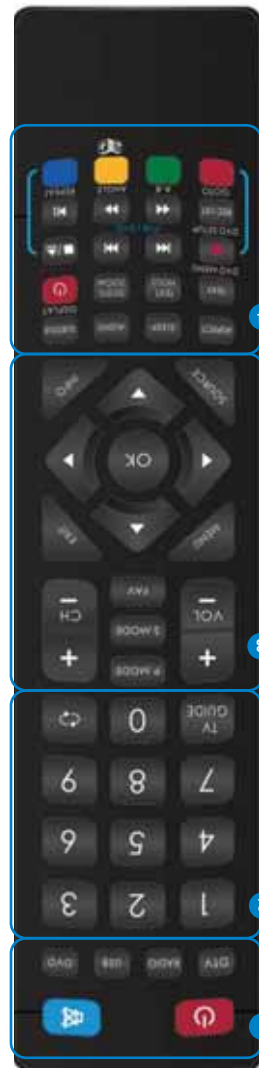

1 STANDBY - Switch on TV when in standby or vice versa
 MUTE - Mute the sound or vice versa
 DTV - Switch to Freeview source
 RADIO - Switch to radio whilst in Freeview source
 USB - Switch to USB source
 DVD - Switch to DVD source

2 NUMBER BUTTONS - 0 - 9 to select a TV channel directly.
 TV GUIDE - Opens the 7 Day TV Guide (Freeview mode)
 - To return to the previous channel viewed

3 VOL (+/-) - To increase / decrease the sound level
 P.MODE - Scrolls through picture mode options
 S.MODE - Scrolls through sound mode options
 FAV - To display favourites menu
 MENU (+/-) - To increase or decrease the channel being watched
 CH (+/-) - To display OSD menu
 EXIT - To exit all menus
 - Allows you to navigate the on-screen menus and adjust the system settings to your preference
 SOURCE - To display the input/source menu
 INFO - Press once for now/next channel information
 Press twice for programme information about current programme

4 ASPECT - To switch the screen between the different picture formats
 SLEEP - Press repeatedly to cycle through the sleep options
 AUDIO - To change the audio language (if available)
 SUBTITLE - To switch the dialogue at the bottom of the screen (on/off)
 TEXT - To enter/exit Text
 TEXT HOLD - Teletext mode - Hold current page which is displayed (Analogue TV)
 DISPLAY - To switch off the screen when listening to radio
 TEXT/DVD ZOOM - Zoom function for Teletext and DVD
 DVD MENU/RECORD - Access the DVD root menu and USB record function
 - To restart the current chapter
 - To advance forward to the next chapter
 - To stop the playback/eject Disc
 (To EJECT the disc press/hold the button for 4 seconds)
 - To play in fast forward mode
 - To play in fast rewind mode
 - To play/pause
 DVD SETUP/REC LIST - Opens up DVD Menu or Opens the list of what has been previously recorded
 A-B - To go to a specific chapter
 A-B - Press once to set point, press a second time to return to point
 ANGLE - Select different angle of DVD
 REPEAT - To repeat playback
 - For Models with Integrated DVD players
 - For Models with PVR Function
 - For Models with USB Playback

Setting up the TV set for the first time

To obtain a copy of your Operating Instructions, please go to: https://www.umc-uk.co.uk/instruction-manuals/Blaupunkt-Television_information.html

Or Scan this QR Code:



 
 
1 Fitting the stand

Follow steps 1 - 2 to safely install the TV stand

TV panel must be facing downwards. For the stand installation, there is one type of screw provided as shown below. To complete the stand installation you will require a cross head screw driver. Place the TV set on a flat and clean surface with the panel facing downwards to avoid damage.



2 x Screws
Used for attaching the stand neck to the TV (fig.2)

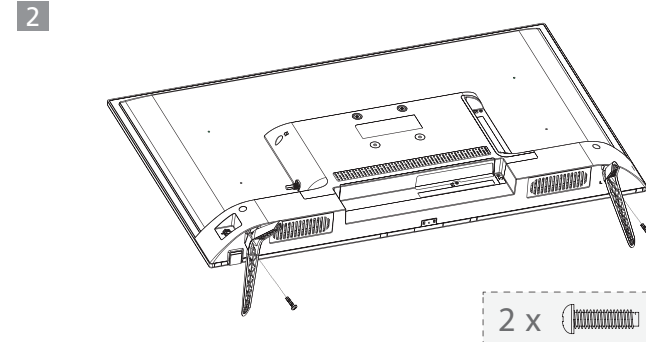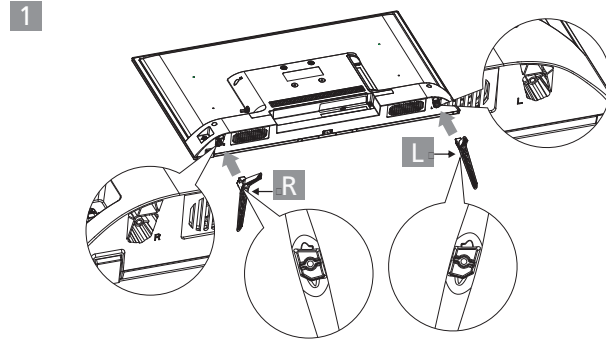


2 Installing batteries



Remove the battery cover from the rear of the remote control and insert the AAA batteries which are supplied in the accessory pack. Ensure that the polarity of the batteries is as shown in the battery compartment. Replace the battery cover. The remote control is ready for use.

 3 Connecting your set

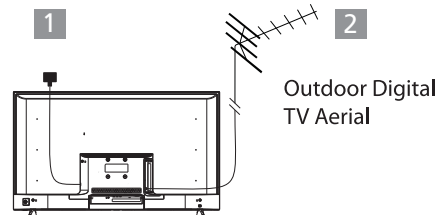

- 1 Connect the TV to your power socket.
- 2 If you wish to use the TV to receive Digital TV channels, connect the RF input from the TV to your outdoor Digital TV aerial. If you do not wish to receive Freeview/Saorview, skip this step.

4 TV Control Stick



The TV control stick is located on the back of the TV. The control stick can be used to control many of the TV functions. The shape of the TV's control stick may vary by model.

While TV is in standby mode:

 
- Press the centre of the control stick once - Power on the TV set.

While watching TV:

- RIGHT/LEFT - volume up/volume down.
- UP/DOWN - changes channel up/down.
- Press the centre of the control stick once - displays the menu.
- Press and hold the centre of the control stick - Standby/Power Off.

Other functions are described in the manual.

Wall Mounting the TV Optional

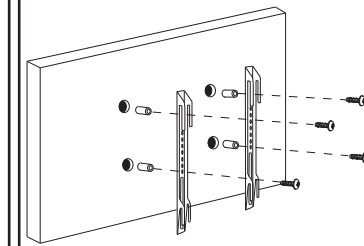

- 1 Remove the four screws that are supplied in the wall mounting holes.
- 2 The wall mount can now be easily attached to the mounting holes on the rear of the TV.
- 3 Install the wall mounting bracket to the television as advised by the bracket manufacturer.

Image for illustration only.

The picture shows the use of spacers, which are not applicable to all sets/installations.

 
Sky remote code

If you wish to use your Sky remote to operate the TV's basic functions, you will need a Sky remote control (Revision 9 or later) and you will need to program it with the code 2134

If you wish to use your Sky Q remote to operate the TV's basic functions, you will need to program it with the code 4170.



First Time Installation

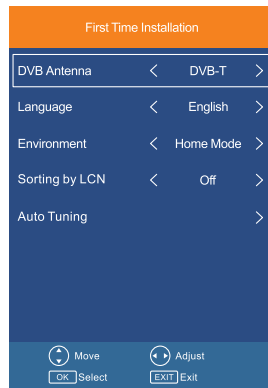

When you first turn on the set, you will be welcomed by the First Time Installation screen as shown. Once you have decided the options as described below, select Auto Tuning and press OK.

DVB Antenna: Select type of TV signal you wish to tune. DVB-T (Freeview channels) or DVB-S (Satellite channels).

Language: Select your preferred on-screen display language. This will change the language in which the menus and associated information is displayed in.

Country: Select the correct country in which the set will be used in. This will enable the TV to correctly install the functions applicable in the country of use. **Note:** Country selection appears after entering Auto Tuning.

Environment: Use this option to select either Home or Store mode.

Home Mode is a power saving mode which reduces the energy used by up to 25% (by reducing the power to the LED/LCD panel). When in STORE MODE the picture will be brighter and you can personalise the settings within the picture settings menu (Contrast, Brightness, Colour etc).

Note: In Home Mode, the TV will switch itself to the standby mode after 4 hours in the event that the buttons on the remote control or TV are not used.

Retuning your TV

Important information about retuning the TV - Please keep this information to hand.

To ensure you are receiving the very latest channels on your Television, we suggest that you retune the set on a monthly basis. This is because channels can be added and/or moved by the broadcaster.

To retune using the buttons on the remote control as marked on the image:

- 1 Press Menu
- 2 Then immediately after, press the number 8 four times.

You will enter the first time installation mode.

Follow the on-screen prompts to retune your set.



Thank you

Thank you for purchasing this television.

 
We hope you have many years of trouble free enjoyment from your purchase.

Your product is covered under the manufacturers guarantee for 12 months from the date of purchase.

If you experience any difficulties with your TV, please refer to the 'Frequently asked questions' in the manual.

Please make a note of your TV model, the serial number and the date of purchase. You will need this information should you need to call the helpline.

Connections

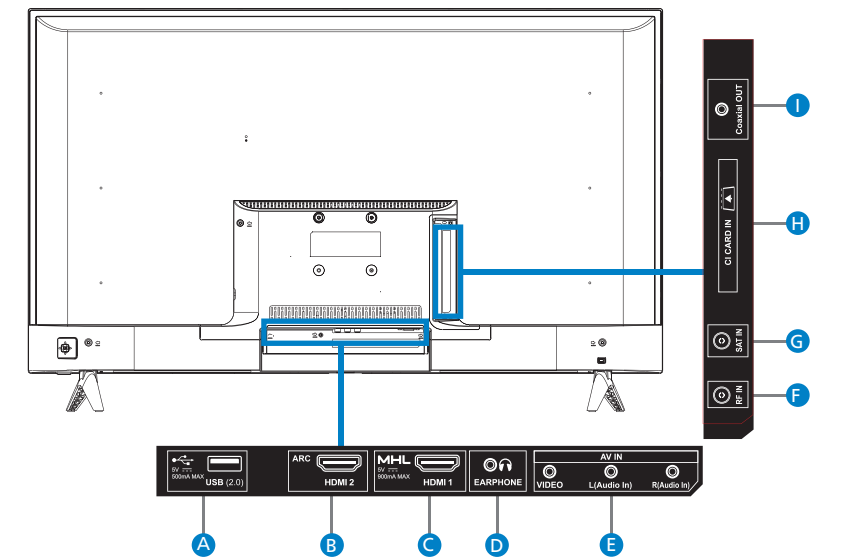

A	USB	USB Port	F	RF In	RF / TV aerial input
B	HDMI 2 (ARC) ¹	HDMI Input	G	SAT In	Satellite Input
C	HDMI 1 (MHL) ²	HDMI Input	H	CI Card In	CI Card Input
D	Earphones	Earphones Output	I	Coaxial Out	Digital Audio Out
E	AV In	Video + Left / Right Audio In			

1. ARC = Audio Return Channel
2. MHL = Mobile High Definition Link