



Quick Start Set Up Guide

For information on using the TV's features, please refer to the operating Instructions.

Model Numbers

BN32H1100BSKB

BN32H1100BSDKB

Register For Your

 Manufacturers Warranty

Register your manufacturers guarantee online within 14 days
 of purchase at www.registertv.co.uk/blaupunkt

Technical Specification

	BN32H1100BSKB	BN32H1100BSDKB
Energy Efficiency Class (SDR)	F	
Power consumption (SDR)	31 W	
Screen resolution (pixels)	1366 x 768	
Screen Size (diagonal)	81 cm / 32 inches	
RF	75 ohm Antenna / Analog / DVB	
Inputs	3 x HDMI, 2 x USB, 1 x SCART, 1 x Mini Component/YPbPr, 1 x Mini Composite/Video & L/R Audio shared for Composite/Video & Component/YPbPr, 1 x RJ45 (Ethernet)	
Sound Outputs	1 x Digital Optical Audio output, 1 x 3.5mm Headphone	
Speaker* / Amplifier Watts (RMS)	2 x 10 / 2 x 8	
Voltage and power consumption	AC 220V~240V; 50Hz 31/45/70 W (ecomode/standard/max)	AC 220V~240V; 50Hz 31/45/80 W (ecomode/standard/max)
Dimensions including stand (mm)	732 W x 467 H x 157 D	
Net weight (Kgs)	5.3	5.5
Wall Mounting	VESA 200 x 200 (mm)	

*Built-in JBL speaker systems (Full-range and tweeter).



JBL is trademark of HARMAN International Industries, Incorporated, registered in the United States and/or other countries.



The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

Quick & easy guide for setting up your TV

What is included in the box

Using the remote control

Setting up the TV for the first time - including attaching the stand

Connecting other devices to the Television

Need help setting up or using your TV?

Please contact the UK & ROI Helpline*

Telephone UK 0330 024 0802 or ROI 01443 3940

Online support at: www.umc-uk.co.uk

Email support at: service@umc-uk.co.uk

*Calls to 0330 numbers are charged at standard call rates and are included as part of any bundled minutes with your phone provider. Calls to the ROI number are charged at the local call rate. The telephone opening hours are:

Monday to Friday: 8.30am – 6pm
 Saturday: 9am – 5pm
 Bank Holidays: 10am – 4pm

 
Closed Christmas and New Years day.




Please save your box/packaging as you will need this in the event of warranty/service repair or support. We are unable to carry out warranty/service if you are unable to package it correctly. The safest way to package your item in the event of warranty/service repair is in its original box/packaging.



USB Memory sticks for recording from Freeview TV
 Your TV has a built in Personal Video Recording function, meaning you can set up recordings from the TV guide directly onto a PVR ready USB memory stick. You can also pause live TV and rewind/fast forward through your recordings. See our great range of tested and compatible PVR ready USB memory sticks at www.umc-uk.co.uk/usb

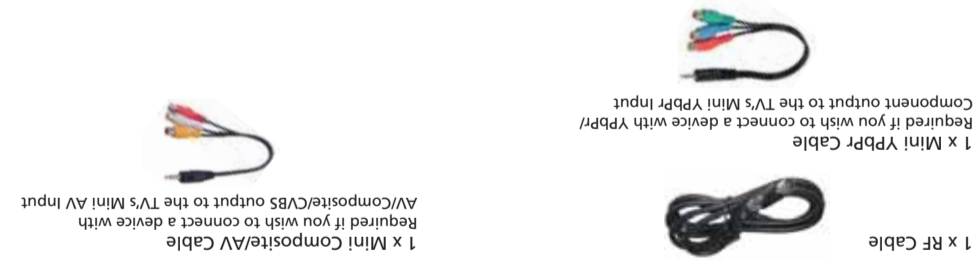

 Additional Accessories
 If you don't have the RF cable shown below, then you can purchase one from www.umc-uk.co.uk/cables if you are intending to connect your TV to an RF socket in order to receive Freeview you will need this cable.

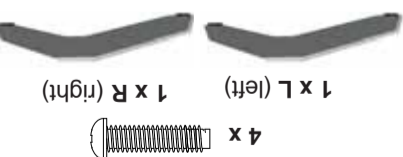

Included with this TV are the following accessories:

- 1 x Quick Start Guide
- 1 x Safety Leaflet
- 1 x Stand Installation pack
- 4 x AAA Batteries
- 1 x Remote Control and 2 x AAA Batteries

To launch the Online Manual, press the [MENU] button and then select Settings>About TV>Help Information> View Online Manual

Online Manual

What is included in the box

- STANDBY - Switch on TV when in Standby or vice versa
- MUTE - Mute the sound or vice versa
- DTV - Switch to Freeview source
- RADIO - Switch to radio whilst in Freeview source
- USB - Switch to USB source
- DVD - Switch to DVD source
- NUMBER BUTTONS - 0 - 9 to select a TV channel directly, TV GUIDE - Opens the 7 Day TV Guide (Freeview mode)
 - To return to the previous channel viewed
- VOL (+/-) - To increase / decrease the sound level
- P.MODE - Scrolls through picture mode options
- S.MODE - Scrolls through sound mode options
- FAV - To display favourites menu
- CH (+/-) - To increase or decrease the channel being watched
- MENU - To display OSD menu
- EXIT - To exit all menus
- (/ / /) - Allows you to navigate the on-screen menus and adjust the system settings to your preference
- SOURCE - To display the input/source menu
- INFO - Press once for now/next channel information
- Press twice for programme information about current programme
- ASPECT - To switch the screen between the different picture formats
- SLEEP - Press repeatedly to cycle through the sleep options
- AUDIO - To change the audio language (if available)
- SUBTITLE - To switch the dialogue at the bottom of the screen (on/off)
- TEXT - To enter/exit Text
- TEXT HOLD - Teletext mode - Hold current page which is displayed (Analogue TV)
- DISPLAY - To switch off the screen when listening to radio
- TEXT/DVD ZOOM - Zoom function for Teletext and DVD
- DVD MENU/RECORD - Access the DVD root menu and USB record function
- TEXT - To restart the current chapter
- To advance forward to the next chapter
- To stop the playback/Eject Disc
- (To EJECT the disc press/hold the button for 4 seconds)
- To play in fast forward mode
- To play in fast rewind mode
- To play/pause
- DVD SETUP/REC LIST - Opens up DVD Menu or Opens the list of what has been previously recorded
- GOTO - To go to a specific chapter
- A-B - Press once to set point, press a second time to return to point
- ANGLE - Select different angle of DVD
- REPEAT - To repeat playback
- For Models with Integrated DVD players
- For Models with PVR Function
- For Models with USB Playback

Using the remote control

Setting up the TV set for the first time

 
To obtain a copy of your Operating Instructions, please go to: www.umc-uk.co.uk/instruction-manuals/blaupunkt

1 Fitting the stand

TV panel must be facing downwards. For the stand installation, there is one type of screw provided as shown below. To complete the stand installation you will require a cross head screw driver. Place the TV set on a flat and clean surface with the panel facing downwards to avoid damage.



4 x Used for attaching the stand neck to the TV (fig.1 to 3)

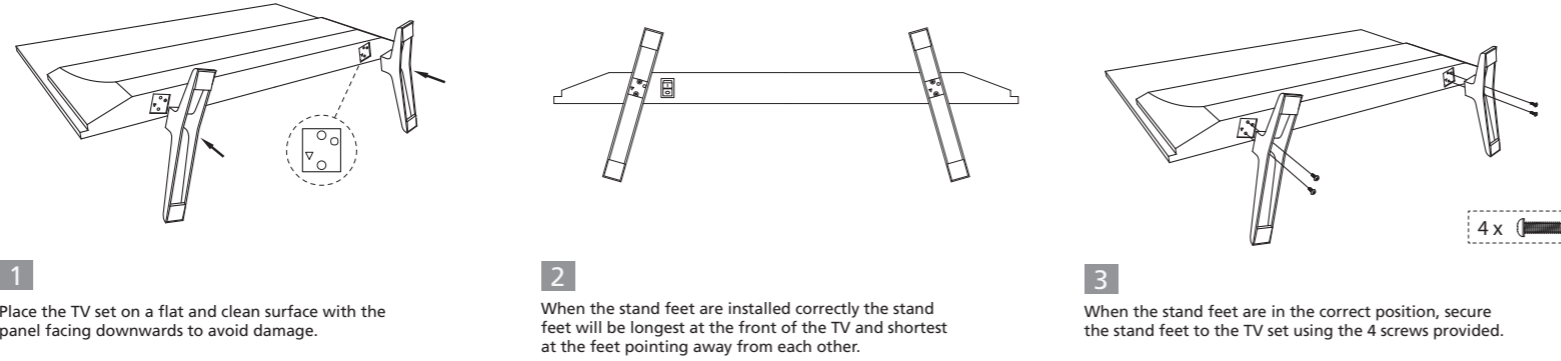


2 Installing batteries



Remove the battery cover from the rear of the remote control and insert the AAA batteries which are supplied in the accessory pack. Ensure that the polarity of the batteries is as shown in the battery compartment. Replace the battery cover. The remote control is ready for use.

 3 Connecting your set

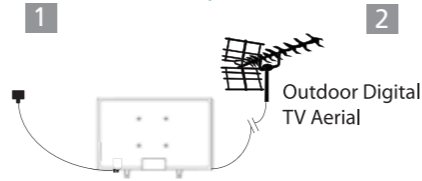

- 1 Connect the TV to your power socket.
- 2 If you wish to use the TV to receive Freeview/Saorview channels, connect the RF input from the TV to your outdoor Digital TV Aerial. If you do not wish to receive Freeview/Saorview, skip this step.

4 TV Control Stick



The TV control stick is located on the back of the TV. The control stick can be used to control many of the TV functions. The shape of the TV's control stick may vary by model.

While TV is in standby mode:

- Press the centre of the control stick once - Power on the TV set.

While watching TV:

- RIGHT/LEFT – volume up/volume down.
- UP/DOWN – changes channel up/down.
- Press the centre of the control stick once – displays the menu.
- Press and hold the centre of the control stick – Standby/Power Off.

Other functions are described in the manual.

Register For Your
BLAUPUNKT
Manufacturers Warranty

Register your manufacturers guarantee online within 14 days of purchase at www.registertv.co.uk/blaupunkt

Wall Mounting the TV

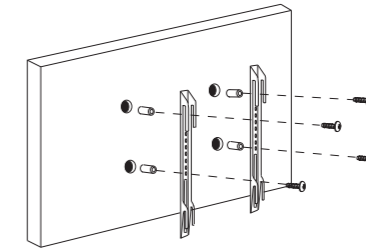 


Image for illustration only.

1. Remove the four screws that are supplied in the wall mounting holes.
2. The wall mount can now be easily attached to the mounting holes on the rear of the TV.
3. Install the wall mounting bracket to the television as advised by the bracket manufacturer.

The picture shows the use of spacers, which are not applicable to all sets/installations.

Sky remote code

If you wish to use your Sky remote to operate the TV's basic functions, you will need a Sky remote control (Revision 9 or later) and you will need to program it with the code 2134.



If you wish to use your Sky Q remote to operate the TV's basic functions, you will need to program it with the code 4170.

First Time Installation



When you first turn on the set, you will be welcomed by the First Time Installation screen as shown above. Once you have decided the options as described below, select Auto Tuning and press OK.

Language: Select your preferred on-screen display language. This will change the language in which the menus and associated information is displayed in.

 
Country: Select the correct country in which the set will be used in. This will enable the TV to correctly install the functions applicable in the country of use.

Environment: Use this option to select either Home or Store mode.

Home Mode is a power saving mode which reduces the energy used by up to 25% (by reducing the power to the LED/LCD panel). When in STORE MODE the picture will be brighter and you can personalise the settings within the picture settings menu (Contrast, Brightness, Colour etc).

Note: In Home Mode, the TV will switch itself to the standby mode after 4 hours in the event that the buttons on the remote control or TV are not used.

Connections

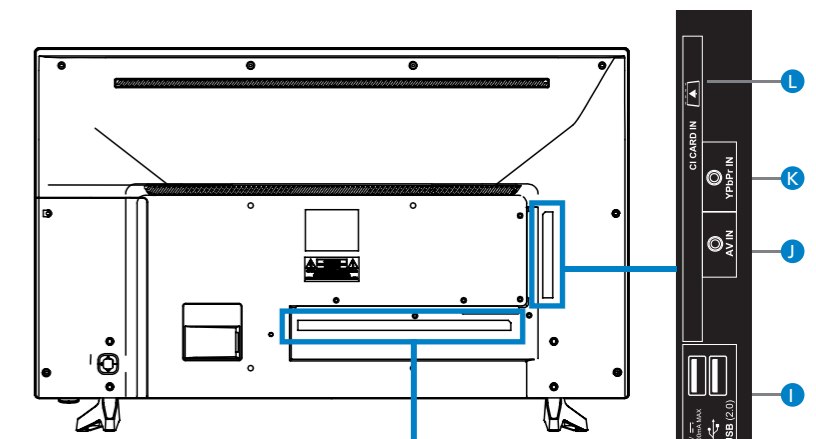

A Earphones	Earphone input	H HDMI 3	HDMI input
B LAN*	Network connection	I USB x 2	USB port
C Digital audio	Digital optical audio output	J AV in	Audio/Video input
D SCART	SCART input	K YPbPr	HD input (Ypbpr)
E HDMI 1 (ARC)	HDMI input	L CI card in	Common interface module
F HDMI 2	HDMI input		
G RF in	RF / TV aerial input		

* The LAN/Ethernet port is used for Digital TV services.

USB Record

- 1 This television contains one tuner, therefore it can only record the channel you are watching or record one channel while the television is in standby mode.
- 2 Note: USB record function is only available in Digital/Freeview TV mode. Due to copyright laws and illegal copying/recording it is not possible to record to/from any other input/source.
- 3 If you wish to use a USB portable hard drive larger than 32GB, please refer to the FAQ section at the rear of the manual (available online).

Retuning your TV

Important information - Retuning the TV - Please keep this information to hand. To ensure you are receiving the very latest channels on your Television, we suggest that you retune the set on a monthly basis. This is because channels can be added and/or moved by the broadcaster.

To retune using the buttons on the remote control:-
Press Menu, then press the number 8 (4 times) so Menu > 8, 8, 8, 8.
You will enter the first time installation mode. Follow the onscreen prompts to retune your set.

Thank you

Thank you for purchasing this television.

We hope you have many years of trouble free enjoyment from your purchase.

Your product is covered under the manufacturers guarantee for 12 months from the date of purchase.

If you experience any difficulties with your TV, please refer to the 'Frequently asked questions' in the manual.

Please make a note of your TV model, the serial number and the date of purchase. You will need this information should you need to call the helpline.