

Technical Specification

Product fiche	
Trademark	Blaupunkt
Model ID	BN40F1131BKB
Energy efficiency class	A+
Visible screen size (diagonal)	101 cm / 40 inches
On mode power consumption	44,0 W
Annual energy consumption *1	64 kWh
Standby power consumption *2	<0,50 W
Off mode power consumption	not applicable
Screen resolution	1920 (H) x 1080 (V)
*1: Energy consumption XYZ kWh per year, based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used. *2: When the TV is turned off with the remote control/standby button and no function is active.	

Additional Technical Information

	BN40F1131BKB
RF	Antena 75 Ohm / Analog / DVB
Inputs	3 x HDMI, 2 x USB, 1xRJ45 (LAN/Ethernet), Video & L/R Audio In
Sound Outputs	1 x 3.5mm Headphone, 1 x Digital Coaxial Audio Out
Speaker / Amplifier Watts (RMS)	2x10 / 2x8
Voltage and power consumption	AC 110~240V; 50/60Hz 44/60/70/<0.5W (Ecomode/Standard/Max/Standby)
Dimensions including stand (mm)	903.4W x 222D x 561.4H
Net weight (Kgs)	5.66
Wall Mounting	VESA 200 x 100 (mm)



The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



Quick Start Set Up Guide

For information on using the TV's features, please refer to the operating Instructions.

Model Numbers

BN40F1131BKB

Register For Your
BLAUPUNKT
 Manufacturers Warranty

Register your manufacturers guarantee online within 14 days of purchase at www.registertv.co.uk/blaupunkt

Quick & easy guide for setting up your TV

What is included in the box

Using the remote control

Setting up the TV for the first time - including attaching the stand

Connecting other devices to the Television

Need help setting up or using your TV?

Please contact the UK & ROI Helpline*

Telephone UK 0330 024 0802 or ROI 01443 3940

Online support at: www.umc-uk.co.uk

Email support at: service@umc-uk.co.uk

*Calls to 0330 numbers are charged at standard call rates and are included as part of any bundled minutes with your phone provider. Calls to the ROI number are charged at the local call rate. The telephone opening hours are: Monday to Friday 8.30am to 6pm, Saturday 9am – 5pm. Bank Holidays - 10am to 4pm

Closed Christmas and New Years day

BLA/QSW/0025

What is included in the box

- Accessories included with this TV are the following accessories
- 1 x Quick Start Guide
 - 1 x Stand installation pack
 - 1 x Safety Leaflet
 - 1 x Remote Control and 2 x AAA Batteries

Additional Accessories

If you don't have the RF cable shown below, then you can purchase one from www.umc-uk.co.uk/cables If you are intending to connect your TV to an RF socket in order to receive Freeview you will need this cable.




RF Cable

Please save your box/packaging as you will need this in the event of warranty/service repair or support. We are unable to carry out warranty/service if you are unable to package it correctly. The safest way to package your item in the event of warranty/service repair is in its original box/packaging.

Using the remote control

Refer to remote control picture on the second page of this user manual.

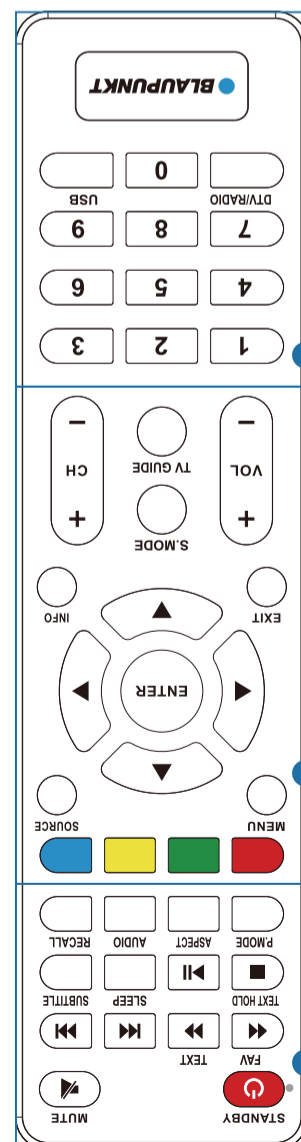 

- STANDBY** - Switch on TV when in standby or vice versa.

MUTE - Mute the sound or vice versa.

FAV - To display favourites menu.

TEXT HOLD - To play in fast rewind mode.

TEXT - Teletext mode - To enter Teletext

TEXT - To play in fast forward mode.

TEXT - To restart the current chapter

TEXT HOLD - Teletext mode - Hold current page which is displayed

RECALL - To return to the previous channel viewed.
- COLOUR BUTTONS** - Additional teletext and OSD functions

MENU - To display OSD menu.

SOURCE - To display the input/source menu.

(▲/▼/▶/◀/ENTER) - Allows you to navigate the on-screen menus and adjust the system settings to your preference. While watching TV, press ENTER to show Channel list.

EXIT - To exit all menus.

INFO - Press once for now/next channel information. Press twice for programme information about current programme.

VOL +/- - To increase / decrease the sound level.

S.MODE - Scrolls through sound mode options.

TV GUIDE - Opens the 7 Day TV Guide (Digital mode).

CH +/- - To increase or decrease the channel being watched.
- 0-9** - To select a TV channel directly.

DTV/RADIO - Switch to Digital TV source and switch between TV and radio in Digital mode.

USB - Switch to USB source.

 
Setting up the TV set for the first time

To obtain a copy of your Operating Instructions, please go to: www.umc-uk.co.uk/instruction-manuals/blaupunkt


1 Fitting the stand

For stand installation, there are two screws provided as shown below. To complete the stand installation you will require a cross head screw driver. Place the TV set on a flat and clean surface with the panel facing downwards to avoid damage.


2 x PB(4x14)

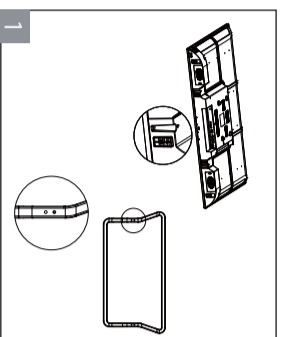

1 Attach the stand neck to the rear of the TV set using the 2xPB(4x14) screws.

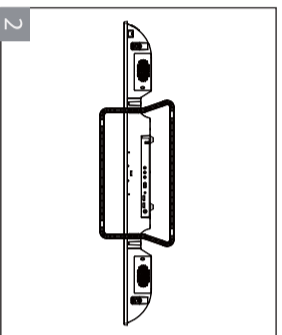 

 
2 Peel off the protective plastic cover then attach the stand base to the bottom.

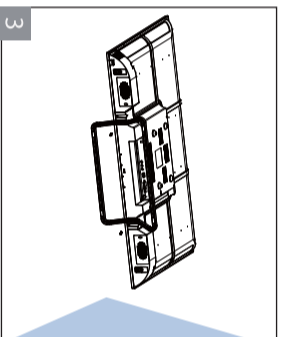

3 Secure the base to the neck by using the 2xPB(4x14) screws provided.


HEPFLU ADVICE FOR FIRST TIME STAND INSTALLATION
When securing the Self-tapping instead of exact type 2xPB(4x14) screws into the base of the stand (on first installation) the screws will be naturally tight as they create a thread in the plastic of the stand neck in order to support a TV of this size.
a) Ensure the cross head screw driver tip fits correctly into the head of the screw and that it is not too big or small.
b) Screw in all screws individually and partially before tightening all of the screws fully.
c) If they become very tight try loosening them slightly and then re-tightening them once again as this will continue the process of creating the thread for the screws.

 2 Installing batteries

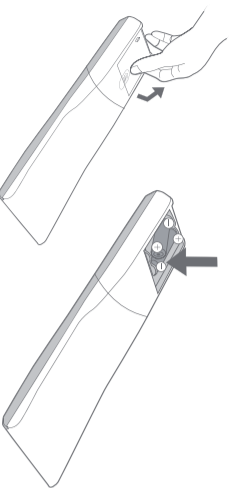


Remove the battery cover from the rear of the remote control and insert the AAA batteries which are supplied in the accessory pack. Ensure that the polarity of the batteries is as shown in the battery compartment. Replace the battery cover. The remote control is ready for use.

 3 Connecting your set

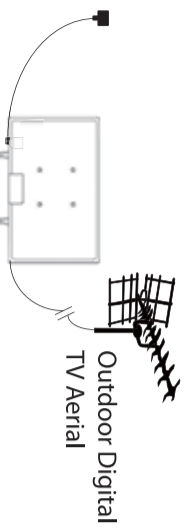

 - 1) Connect the TV to your power socket.
- 2) If you wish to use the TV to receive Freeview/Saorview channels, connect the RF input from the TV to your outdoor Digital TV aerial. If you do not wish to receive Freeview/Saorview, skip this step.

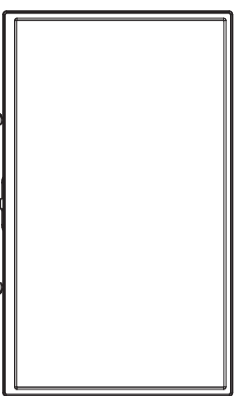

Power button (behind the LED indicator)

(Power on/Standby) LED Indicator: Press to turn on and off Indicator on(Red) Standby mode Indicator on(No light) Power on mode



To receive Freeview channels, in particular Freeview HD channels, you will need a Digital TV aerial and be in a good Freeview coverage area. You can check coverage for your postcode at www.freeview.co.uk.

Please note that any Freeview HD channels found during tuning will be placed in channel positions above 100. For example, 101 (BBC1 HD) 102 (BBC2 HD) etc.

5 First Time Installation



When you first turn on the set, you will be welcomed by the First Time Installation screen as shown above. Once you have decided the options as described below, select Auto Tuning and press OK

Language: Select your preferred on-screen display language. This will change the language in which the menus and associated information is displayed in.. When the set up has been completed, this can be changed by selecting Menu > Settings > Language.

Country: Select the correct country in which the set will be used in. This will enable the TV to correctly install the functions applicable in the country of use.

Environment: Use this option to select either Home or Store mode.

HOME MODE is a power saving mode which reduces the energy used by up to 25% (by reducing the power to the LED/LCD panel).

When in STORE MODE the picture will be brighter and you can personalise the settings within the picture settings menu (Contrast, Brightness, Colour etc.

Note: In Home Mode, the TV will switch itself to the standby mode after 4 hours in the event that the buttons on the remote control or TV are not used.

Button control

TV sets basic functions can be controlled by the Power button which is used for powering on the TV. This button is located on the TV, behind the LED indicator.



 
While TV is running, short press of the Power button will display the button menu on the screen (as shown on the image above). This menu will automatically disappear in 5 seconds of inactivity.

By short presses of the Power button you cycle through these menu options one by one until you have selected desired option.

By long press of the Power button you will activate desired option.

- ⏻ : Power off Icon : Corresponding to the "POWER" button of remote.
- ⌂ : Menu Icon : Corresponding to the "MENU" button of remote.
- ⏪ : Source Icon : Corresponding to the "SOURCE" button of remote.
- ⏩ : CH+ Icon : Corresponding to the "CH+" button of remote.
- ⏴ : CH- Icon : Corresponding to the "CH-" button of remote.
- ⏶ : Volume+ Icon : Corresponding to the "VOL+" button of remote.
- ⏵ : Volume- Icon : Corresponding to the "VOL-" button of remote.

Connectivity

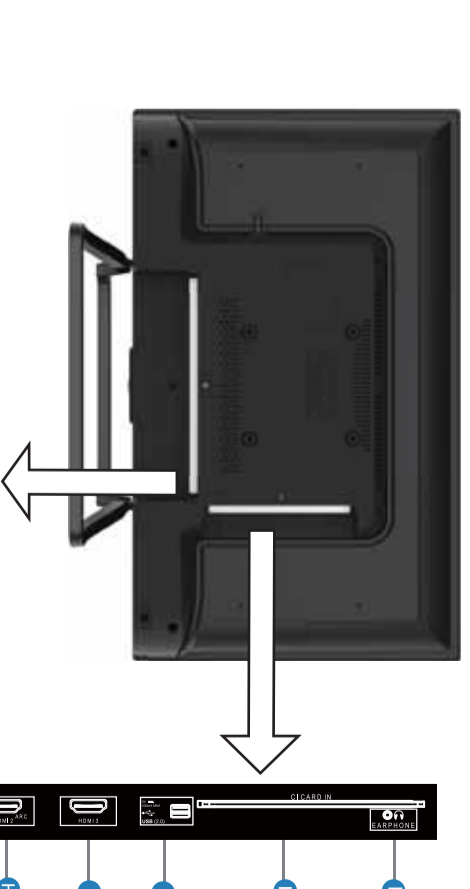

- | | | | |
|------------------------|------------------------------|---------------------|-------------------------------|
| A ETHERNET/LAN* | Network Connection | H HDMI 2 | HDMI Input (ARC) |
| B VIDEO | Composite/CBS video input | I HDMI 3 | HDMI Input |
| C D L/R Audio | Audio for composite video | J 2 x USB | USB port |
| E COAX | Digital Coaxial Audio Output | K CI CARD IN | Common Interface module Input |
| F RF in | RF/TV Aerial input | L EARPHONES | Earphone Input |
| G HDMI 1 | HDMI Input | | |

*The LAN/Ethernet port is used only for Pay TV services and Freeview HD (Freeview services only available in the UK). It is not intended to be used for internet use.