



# Technical Specification

## Product fiche

Trademark	Sharp	
Model ID	50BL21A 50BL31A 50BL41A 50BL51A	55BL21A 55BL31A 55BL41A 55BL51A
Energy efficiency class	A+	A
Visible screen size (diagonal)	126cm / 50 inches	139 cm / 55 inches
On-mode power consumption	70 W	110.0 W
Annual energy consumption *1	102 kWh	161 kWh
Standby power consumption *2	<0.50 W	<0.50 W
Off mode power consumption	n/a	n/a
Screen resolution	3840 (H) x 2160 (V)	3840 (H) x 2160 (V)

\*1: Energy consumption XYZ kWh per year, based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.  
\*2: When the TV is turned off with the remote control/standby button and no function is active.

	50BL21A 50BL31A 50BL41A 50BL51A	55BL21A 55BL31A 55BL41A 55BL51A
RF	75 ohm Antenna / Analog / DVB / Satellite	
Inputs	4 x HDMI, 2 x USB, 1 x micro USB, 1x micro SD card reader, 1 x RJ45 LAN/Ethernet, 1 x Composite/CVBS Video & Component/YPbPr Input, 1 x L/R Audio input for Composite/CVBS & Component YPbPr	
Sound Outputs	1 x Digital Optical Audio output, 1 x 3.5mm Headphone	
Speaker**/ Amplifier Watts (RMS)	2 x 10 / 2 x 8	
Voltage and power consumption	AC 220V ~ 240V; 50Hz 70/95/115W (home mode/standard/ max) (<0.5W in Standby)	AC 220V ~ 240V; 50Hz 110/145/180W (home mode/standard/ max) (<0.5W in Standby)
Dimensions including stand (mm)	1125W x 697H x 233D	1239W x 763H x 233D
Net weight (Kgs)	12.2	14.2
Wall Mounting	VESA 200 x 200 (mm)	VESA 400 x 200 (mm)

\*\*Built-in Harman Kardon speaker systems (Full-range speaker and tweeter).

**SOUND SYSTEM BY harman/kardon**  
Harman Kardon is trademark of HARMAN International Industries, Incorporated, registered in the United States and/or other countries.

**HDMI**  
The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

**androidtv**  
Google, Google Play, YouTube, Android TV and other marks are trademarks of Google LLC.

# SHARP

## androidtv

### Quick Start Set Up Guide

For information on using the TV's features, please refer to the Operating Instructions. (Available online to download.)

#### Model Numbers

50BL21A 55BL21A  
50BL31A 55BL31A  
50BL41A 55BL41A  
50BL51A 55BL51A

Register your manufacturers guarantee online within 14 days of purchase at

[www.registertoday.co.uk/sharp](http://www.registertoday.co.uk/sharp) and enter into a prize draw to



#### Quick & easy guide for setting up your TV

What is included in the box

Using the remote control

Setting up the TV for the first time - including attaching the stand

Connecting other devices to the Television

#### Need help setting up or using your TV?

Please contact the UK & ROI Helpline\*

Telephone UK 0330 024 0803 or ROI 01443 3323

Online support at: [www.umc-uk.co.uk](http://www.umc-uk.co.uk)

Email support at: [service@umc-uk.co.uk](mailto:service@umc-uk.co.uk)

\*Calls to 0330 numbers are charged at standard call rates and are included as part of any bundled minutes with your phone provider.

Calls to the ROI number are charged at the local call rate.

The telephone opening hours are:

Monday to Friday: 8.30am - 6pm.

Saturday: 9am - 5pm.

Bank Holidays: 10am - 4pm.

Closed Christmas and New Years day



Please save your box/packaging as you will need this in the event of warranty/service repair or support. We are unable to carry out warranty/service if you are unable to package it correctly. The safest way to package your item in the event of warranty/service repair is in its original box/packaging.

Please note that any Freeview HD channels found during tuning will be placed in channel positions above 100. For example, 101 (BBC1 HD) 102 (BBC2 HD) etc.  
To receive Freeview channels, in particular Freeview HD channels, you will need a Digital TV aerial and be in a good Freeview coverage area.  
You can check coverage for your postcode at [www.freeview.co.uk](http://www.freeview.co.uk).

This product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft. Content owners use Microsoft PlayReady™ content access technology to protect their intellectual property, including copyrighted content. This device uses PlayReady technology to access PlayReady-protected content and/or WMDRM-protected content. If the device fails to properly enforce restrictions on content usage, content owners may require Microsoft to revoke the device's ability to consume PlayReady-protected content. Revocation should not affect unprotected content or content protected by other content access technologies. Content owners may require you to upgrade PlayReady to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.



RF Cable

If you don't have the RF cable shown below, then you can purchase one from [www.umc-uk.co.uk/cables](http://www.umc-uk.co.uk/cables). If you are intending to connect your TV to an RF socket in order to receive Freeview, you will need this cable.

#### Additional Accessories

- 1 x Quick Start Guide
- 1 x Remote Control and 2 x AAA Batteries
- 1 x Safety Leaflet
- 1 x Stand installation pack

Included with this TV are the following accessories

## What is included in the box

To launch the online manual, press the HOME button, select Apps from the Home menu, and select "E-Instruction Manual" from the apps list.

## Online Manual

## Using the remote control



If you wish to use your Sky remote to operate the TV's basic functions, you will need a Sky remote control (Revision 9 or later) and your Sky Q remote to operate the TV's basic functions, you will need to program it with the code 4170.

### Sky Remote Code



- 1** STANDBY - Switch on the TV when in standby or vice versa. By long pressing of this button, the set will display a menu offering power down option to energy saving standby mode.
- 2** NUMBER BUTTONS - 0-9 to select a TV channel directly.
- 2** MUTE - Mute the sound or vice versa.
- 2** TV GUIDE - Opens the 7 day TV guide (digital TV mode).
- 3** VOL (+/-) - To increase/decrease the sound level.
- 3** The Google Assistant - Use your voice to access entertainment, control smart devices, obtain answers on screen, and more.
- 3** HOME - Display the TV Home Menu.
- 3** CH (+/-) - To increase or decrease the channel being watched.
- 3** MENU - Display LIVE TV menu. This button works only in sources (TV, HDMI, Component, etc.). It will not work in the Home Menu.
- 3** INFO - Press once for now/next channel information.
- 3** (L/R/+/OK) - Allows you to navigate the on-screen menus and adjust the system settings to your preference.
- 3** BACK - To go back a previous step.
- 3** EXIT - To exit all menus.
- 4** NETFLIX - Access the Netflix App.
- 4** Prime video - Access the Prime video App.
- 4** YouTube - Access the YouTube App.
- 4** Google Play Movies & TV - Access the "Google Play Movies & TV" online service.
- 4** MTS - Opens audio track menu.
- 4** TEXT - To enter/text teletext.
- 4** SUB - To switch the dialogue at the bottom of the screen (on/off).
- 4** TV - To switch to Live TV.
- 4** MI - To play/pause media
- 4** TV - To switch to Live TV.
- 4** PAUSE - To play in fast forward mode
- 4** PLAY - To stop the playback
- 4** COLOUR BUTTONS - Execute corresponding function at that time

# Setting up the TV set for the first time

## 1 Fitting the stand

The TV panel must be facing downwards.

For the stand installation, there is one type of screw provided as shown below.

**Note:** To complete the stand installation you will require a cross head screw driver.



1

Place the TV set on a flat and clean surface with the panel facing downwards to avoid damage.



Back/Shortest

2

When the stand feet are installed correctly the stand feet will be longest at the front of the TV and shortest at the back with the feet pointing away from each other.



3

When the stand/feet are in the correct position, secure the feet to the underside of the TV set using 4 screws provided.

 
Win a **SHARP** Soundbar

Register your manufacturers guarantee online within 14 days of purchase at [www.registertoday.co.uk/sharp](http://www.registertoday.co.uk/sharp) and enter into a prize draw to win a Sharp Soundbar

Terms and conditions apply. Online registration only.



## 2 Connecting your set

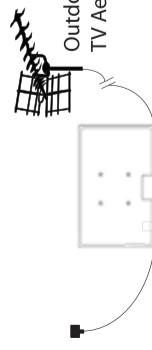


3.



- 1) Connect the TV to your power socket.
- 2) If you wish to use the TV to receive Freeview/Saorview channels, connect the RF input from the TV to your outdoor Digital TV aerial. If you do not wish to receive Freeview/Saorview, skip this step.
- 3) Connect to the internet. Ethernet provides the most stable connection.

## 3 Powering On the TV
 
### TV Control Stick

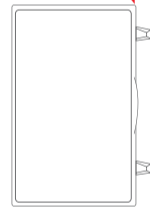

Switch on the television by pressing the TV control stick located on the TV set.


### Remote Control: Installing Batteries



 
Insert the batteries supplied into the remote control and press the standby button to power on the TV.

## 4 First time installation

Basic installation steps are shown below. These may vary slightly depending on your model. Due to Android software updates, the look and feel of the TV start up procedure and subsequent menus can be subject to change.

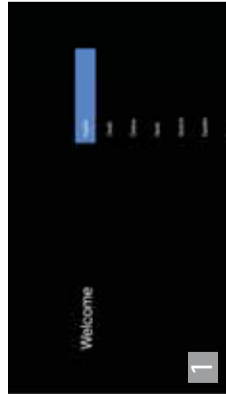

 When the set first turns on, it will ask you to select your preferred on-screen display language. This will change the language in which the menus and associated information is displayed in.

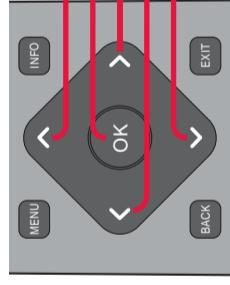
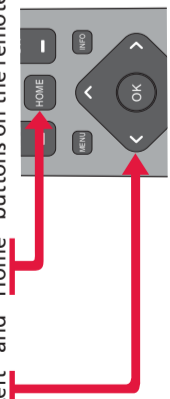 



- Press to navigate up
- Press to confirm a selection
- Press to navigate right
- Press to navigate left
- Press to navigate down


**Android Phone users**  
During the set-up process, you will be prompted to sign-in to your Google account using your pre-installed "Google" app. This set up process will depend upon which model TV you are setting up. Please ensure you have your account details to hand.

## 5 Pairing the remote

 If during the first time installation process the remote was not paired or skipped, then follow the process below to pair your remote with the television.


- 1) Turn the set on.
  - 2) Press the  button on the remote control.
  - 3) The LED indicator on the remote will illuminate and the pairing screen will appear on the TV.
  - 4) Now press and hold the "Left" and "Home" buttons on the remote simultaneously.
 
  - 5) The LED indicator on the remote control will start to flash.
  - 6) Select the detected remote control shown on the screen and press OK.
  - 7) Once paired the pairing screen will disappear.
- This process will only need to be carried out if the remote is not paired. Once paired, when the  button is pressed it will open the Google Assistant screen on the set and activate voice functionality.

## 6 The Google Assistant

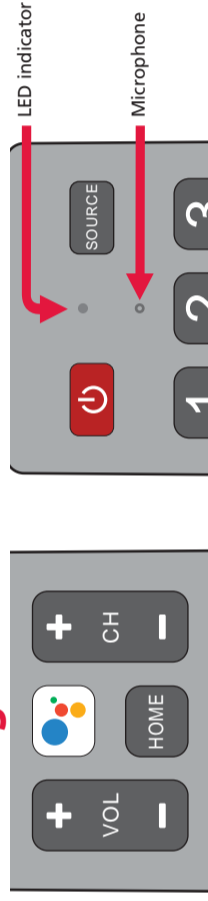

### Using the Google Assistant with your voice

Remote controls with the Google Assistant have a Google Assistant dedicated button and a built-in microphone. To use this feature with the Google Assistant remote control, follow the instructions as below.

- 1) Before using the Google Assistant, you will need to pair the remote. Please follow step 5 of this guide to pair your remote to enable the Google Assistant.
- 2) Press the  button. The LED indicator on the remote control will illuminate.
- 3) Wait for the on-screen message from the Google Assistant, then speak into the microphone. A good rule of thumb is to have the microphone positioned about 15-30 centimetres away from your mouth.

By speaking into the microphone, you can search for various content or control your connected smart home devices. Speech examples may be displayed on the television screen depending on your model.

## Wall Mounting the TV

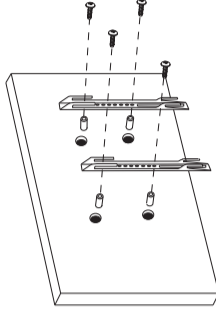 



Image for illustration only.

For the dimensions of the VESA mounting, please refer to the Technical Specifications section of this document.

- 1) Remove the four screws that are supplied in the wall mounting holes.
- 2) The wall mount can now be easily attached to the mounting holes on the rear of the TV.
- 3) Install the wall mounting bracket to the television as advised by the bracket manufacturer.

The picture shows the use of spacers, which are not applicable to all sets/installations.

## Connectivity

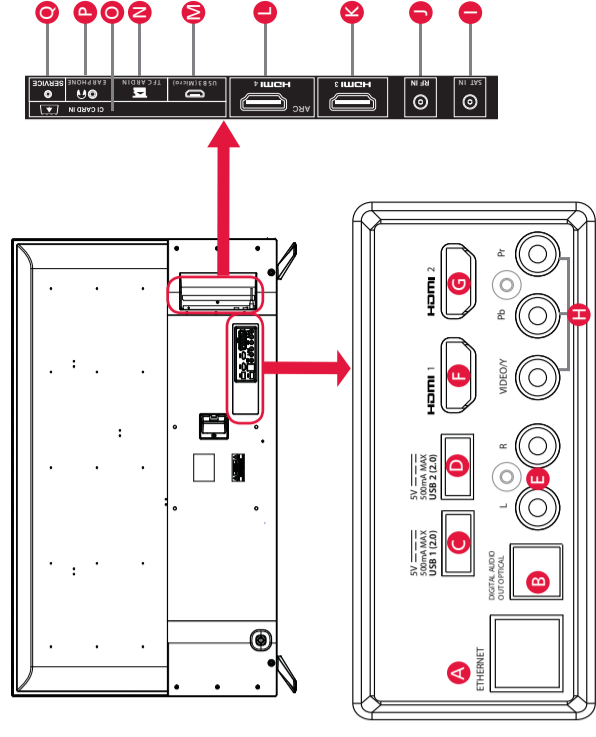 

<b>A</b> Ethernet/LAN*	Network connection	<b>L</b> SAT IN	Satellite input
<b>B</b> Digital Audio	Digital Optical Audio Output	<b>J</b> RF IN	RF / TV aerial input
<b>C</b> USB 1	USB port 2.0	<b>K</b> HDMI 3	HDMI input
<b>D</b> USB 2	USB port 2.0	<b>L</b> HDMI 4	HDMI input (ARC)
<b>E</b> L/R	Audio shared for Video/Composite and Component (Y/Pb/Pr)	<b>M</b> USB 3 (micro)	Micro USB cable input
<b>F</b> HDMI 1	HDMI input	<b>N</b> TF Card in	TransFlash / micro SD Card input
<b>G</b> HDMI 2	HDMI input	<b>O</b> CI Card in	Common interface module
<b>H</b> Video/YPbPr	Video input (green) and HD input (YPbPr)	<b>P</b> Earphones	Earphone output
		<b>Q</b> Service Input	Input is used only by service centres

\* The Ethernet/LAN port is used for Freeview HD services and smart functions.