



# Setting up the TV set for the first time


## 1 Fitting the stand

For stand feet installation, there is one type of screw provided as shown below. To complete the stand installation you will require a cross head screw driver. Place the TV set on a flat and clean surface with the panel facing downwards to avoid damage.

**4 x** 


Used for attaching the stand to the TV set (fig.2)

TV panel must be facing downwards.

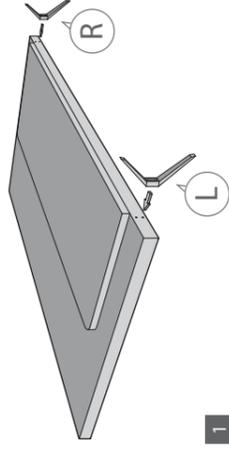

**1**

Place the TV set on a flat and clean surface with the panel facing downwards to avoid damage, then fix the stand feet shown. The feet are marked **L** (left) and **R** (right).

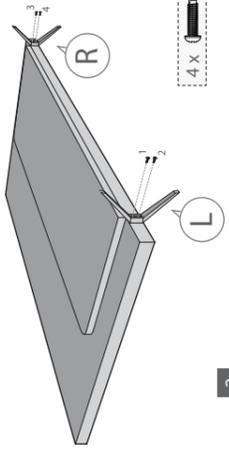

**2**

Secure the stand feet to the underside of the TV set using the 4 screws provided.

Win a

# SHARP Soundbar

Register your manufacturers guarantee online within 14 days of purchase at [www.registertoday.co.uk/sharp](http://www.registertoday.co.uk/sharp) and enter into a prize draw to win a Sharp Soundbar

Terms and conditions apply. Online registration only.



## 2 Connecting your set



or

Satellite Dish

Roof Aerial

or

Connect Car Adaptor to the TV, then connect it to the vehicle power socket.

For TV use at home: Use the RF cable, connect the TV to the TV Aerial wall socket. Connect power adaptor to the TV and plug into the mains supply.

For TV use in a car/caravan: Connect the supplied Antenna to the TV. Connect Car Adaptor to the TV, then connect it to the vehicle power socket.

## 3 Installing batteries




Insert the batteries supplied into the remote control. The remote control should automatically be paired with the TV set. If this is not the case, please refer to the 'Pairing the remote control' section of this Quick Start Guide.

## Button layout

- 1** Stop/Eject DVD\*
- 2** Play/Pause DVD\*
- 3** Volume up and menu right
- 4** Volume down and menu left
- 5** Programme/Channel up and menu up
- 6** Programme/Channel down and menu down
- 7** Displays Menu/OSD
- 8** Displays the input source menu
- 9** Standby Power On/Off

\* only for models with built-in DVD player

## 4 First time installation

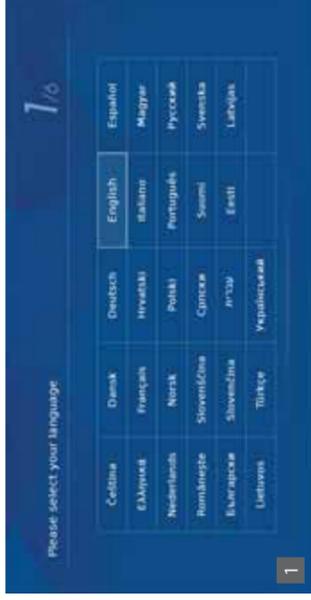

**1**

**1. Languages**  
Select your preferred on screen display language. This will change the language in which the menus and associated information is displayed in. When set up has been completed, this can be changed by selecting Menu > Settings > Language



**2**

**2. Country Selection**  
Select the correct flag for the country in which the set will be used in. This will enable the set to correctly install the functions applicable in the country of use.



**3. Network setup**  
You can connect the TV to your broadband router or wireless network in order to take advantage of the Smart functions. If you connect the TV to your router using an Ethernet cable (recommended) this step will be skipped. Follow the on screen prompts to connect to your wireless network. You can set up the Network connection later in the network menu.



**4**

**4. Environment of Use**

**Home Mode:** For normal use, by default it is set to a power saving mode which reduces the energy used by up to 25% (by reducing the power to the LED/LCD panel). This can be changed in the picture mode settings.

**NOTE:** In Home Mode, the TV will switch itself to the standby mode after 4 hours in the event that the buttons on the remote control or TV set are not used.

**Store Mode:** For store display use. The picture is adjusted to optimum settings. The store demonstration will appear on the screen automatically after two minutes.



**5**

**5. TV installation – Audio.**

Depending on how you use /install your TV, select the appropriate setting. The sound settings on the TV will adjust to suit the type of installation.




**6**

**6. Default Source**

Select the source which you use the most. If Digital TV (Freeview) is chosen, then at the next step, the set will tune in and default to Digital TV (Freeview). If one of the other sources is selected, then the set will not tune in at this stage and default to that input. If it is required to tune the set in later, this can be achieved by selecting Menu > Channels

## Wall Mounting the TV

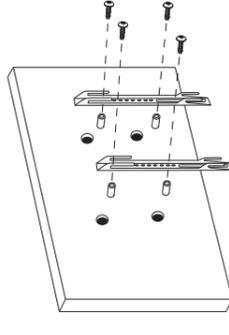


- 1.** Remove the four screws that are supplied in the wall mounting holes.
- 2.** The wall mount can now be easily attached to the mounting holes on the rear of the TV.
- 3.** Install the wall mounting bracket to the television as advised by the bracket manufacturer.

The picture shows the use of spacers, which are not applicable to all sets/installations.

Image for illustration only. For the dimensions of the VESA mounting, please refer to the Technical Specifications section of this document.

## Connectivity

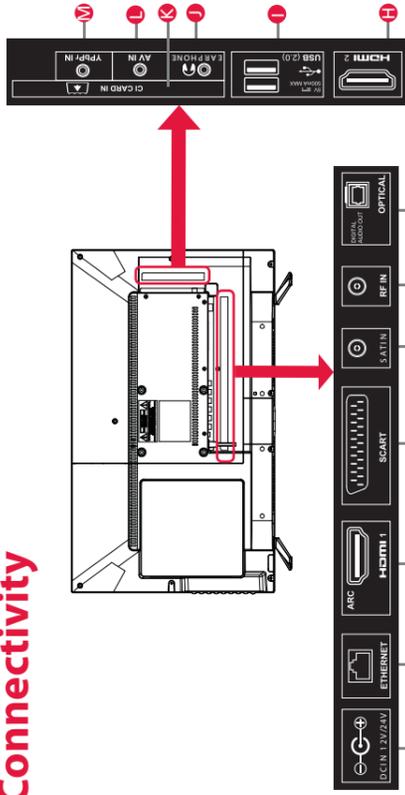

<b>A</b>	12V / 24V DC IN	12V / 24V Power Adapter	<b>H</b>	HDMI 2	HDMI input
<b>B</b>	Ethernet/LAN*	Network Connection	<b>I</b>	2 x USB	USB port
<b>C</b>	HDMI 1 (ARC)	HDMI input	<b>J</b>	Earphone	Earphone Input
<b>D</b>	SCART	SCART input	<b>K</b>	CI CARD IN	Common interface module
<b>E</b>	SAT IN**	Satellite Input	<b>L</b>	AV IN	Audio/Video Input
<b>F</b>	RF IN	RF / TV Aerial Input	<b>M</b>	YPbPr	HD Input (Ypbpr)
<b>G</b>	Optical Digital Audio	Digital Audio output			

\* The Ethernet/LAN port is used for Freeview HD services and smart functions.

\*\* The Satellite input is for the LC-24CHG6132KFM and LC-24DHG6132KFM models only.