

Technical Specification

Product fiche

Trademark	Sharp
Model ID	LC-40UG7242K LC-40UG7252K
Energy efficiency class	A
Visible screen size (diagonal)	102 cm / 40 inches
On-mode power consumption	62.0 W
Annual energy consumption *1	91 kWh
Standby power consumption *2	<0.50 W
Off mode power consumption	n/a
Screen resolution	3840 (H) x 2160 (V)
*1: Energy consumption XYZ kWh per year, based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.	
*2: When the TV is turned off with the remote control/standby button and no function is active.	

Additional Technical Information	LC-40UG7242K LC-40UG7252K
RF	75 ohm Antenna / Analog / DVB / Satellite
Inputs	3 x HDMI, 1 x USB3.0, 2 x USB2.0, 1 x SD card reader, 1 x RJ45 LAN/Ethernet, 1 x Mini Component/YPbPr, 1 x Mini-SCART, 1 x Mini AV IN - Composite Video/CVBS and L/R Audio shared for Composite Video and Component/YPbPr,
Sound Outputs	1 x Digital Optical Audio output, 1 x 3.5mm Headphone
Speaker*/ Amplifier Watts (RMS)	2 x 10 / 2 x 8
Voltage and power consumption	AC 220V ~ 240V; 50Hz 62/90/110W (home mode/standard/max) (<0.5W in Standby)
Dimensions including stand (mm)	921W x 576H x 199D
Net weight (Kgs)	8.0
Wall Mounting	VESA 200 x 300 (mm)

*Built-in **Harman Kardon** speaker systems (Full-range speaker and tweeter).

SOUND SYSTEM BY

harman / kardon

Harman Kardon is trademark of HARMAN International Industries, Incorporated, registered in the United States and/or other countries.

HDMI

The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



Quick Start Set Up Guide

For information on using the TV's features, please refer to the Operating Instructions.

Model Numbers
LC-40UG7242K
LC-40UG7252K

Register your manufacturers guarantee online within 14 days of purchase at www.registertoday.co.uk/sharp and enter into a prize draw to

Win a
SHARP
Soundbar



Terms and conditions apply. Online registration only.

Quick & easy guide for setting up your TV

What is included in the box

Using the remote control

Setting up the TV for the first time - including attaching the stand

Connecting other devices to the Television

Need help setting up or using your TV?

Please contact the **UK & ROI Helpline***
Telephone UK 0330 024 0803 or ROI 01443 3323
Online support at: www.umc-uk.co.uk
Email support at: service@umc-uk.co.uk

*Calls to 0330 numbers are charged at standard call rates and are included as part of any bundled minutes with your phone provider.

Calls to the ROI number are charged at the local call rate.

The telephone opening hours are Monday to Friday 8.30am to 6pm, Saturday 9am – 5pm.

Bank Holidays - 10am to 4pm

Closed Christmas and New Years day



Please save your box/packaging as you will need this in the event of warranty/service repair or support. We are unable to carry out warranty/service if you are unable to package it correctly. The safest way to package your item in the event of warranty/service repair is in it's original box/packaging.

Connecting Component/YPbPr - you will need both the Mini YPbPr Cable and the Mini Composite/AV Cable. The YPbPr cable will be used exclusively for video (red/green/blue) and the AV cable will be used for audio (Red/White) Yellow stays unconnected).

Connecting Composite/AV - Mini Composite/AV Cable will be enough for both video and sound.

Mini SCART

Required if you wish to connect a device with SCART to the TV's Mini SCART input

Mini Composite/AV Cable

Required if you wish to connect a device with AV/Composite/CVBS output to the TV's Mini AV input

RF Cable

Required if you wish to connect a device with YPbPr/Component output to the TV's Mini YPbPr input

Should you wish to connect older/analogue devices to your television, you can purchase the necessary cables either from your retailer or at www.umc-uk.co.uk/cables

Additional Accessories

1 x Power Cable

1 x TV

1 x Stand installation pack

4 x Safety Leaflet

1 x Quick Start Guide

1 x Remote Control and 2 x AAA Batteries

1 x L (left)

1 x R (right)

Accessories

Included with this TV are the following accessories

What is included in the box



If you wish to use your Sky remote to operate the TV's basic functions, you will need a Sky remote control (Revision 9 or later) and you will need to program it with the code 2134. If you wish to use your Sky Q remote to operate the TV's basic functions, you will need to program it with the code 4170.

Key

For models with integrated DVD players.

For models with PVR Function.

For models with USB Playback.

For models with 3D functions.

1

ON/OFF - Switch on the TV when in standby or vice versa.

MUTE - Mute the sound or vice versa.

2

NUMBER BUTTONS - 0-9 to select a TV channel directly.

TV GUIDE - Opens the 7 day TV guide (digital TV mode).

↶ - To return to the previous channel viewed.

3

VOL (+/-) - To increase/decrease the sound level.

PICTURE - Scrolls through picture mode options.

SOUND - Scrolls through sound mode options.

CH (+/-) - To increase or decrease the channel being watched.

MENU - To display OSD menu.

EXIT - To exit all menus.

(+/-)/+/+/-/OK - Allows you to navigate the on-screen menus and adjust the system settings to your preference.

BACK - To go back a previous step.

FAV - To display favourites menu.

4

INFO - Press once for now/next channel information.

TEXT - To enter/exit Text.

SUBTITLE - To switch the dialogue at the bottom of the screen (on/off).

TV - To switch to Digital Channels.

YOUTUBE - Access the Youtube App.

NETFLIX - Access the Netflix App.

NET+ - Access the Aquos NET+ Smart Portal.

RECORD/DVD MENU - Access the USB record function/Access the DVD menu of the DVD inserted (must be set to the DVD source).

REC LIST/DVD SETUP - Opens the list of previously recorded items/Access the TV's DVD setup menu (must be set to the DVD source).

⏮ - To restart the current chapter

⏪ - To advance forward to the next chapter

⏸ - To stop the playback/Eject Disc

(To EJECT the disc press/hold the button for 4 seconds)

⏩ - To play in fast forward mode

⏮ - To play in fast rewind mode

⏹ - To play/pause

⏪ - To go to a specific chapter.

GOTO - To go to a specific chapter.

A-B - Press once to set point, press a second time to return to point.

ANGLE/3D - Select different angle of DVD.

REPEAT - To repeat playback.

 
 


Setting up the TV set for the first time


1 Fitting the stand

TV panel must be facing downwards.


For the stand installation, there is one type of screw provided as shown below.
To complete the stand installation you will require a cross head screw driver.
Place the TV set on a flat and clean surface with the panel facing downwards to avoid damage.

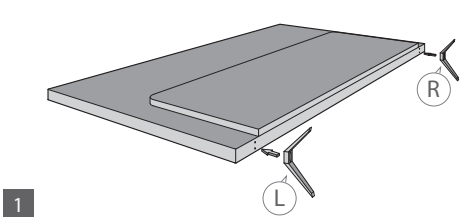

 Place the TV set on a flat and clean surface with the panel facing downwards to avoid damage.

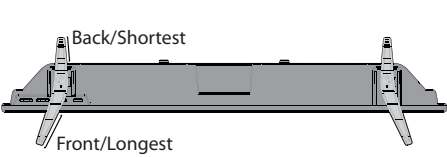


 When the stand feet are installed correctly the stand feet will be longest at the front of the TV and shortest at the back with the feet pointing away from each other.

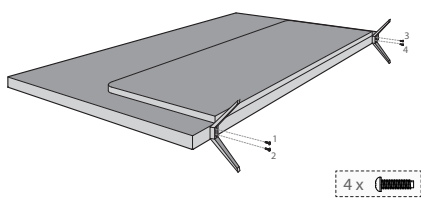

When the stand/feet are in the correct position, secure the feet to the underside of the TV set using 4 screws provided.

 
3 Connecting your set

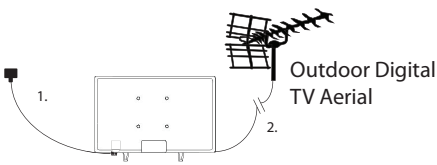

- 1) Connect the TV to your power socket.
- 2) If you wish to use the TV to receive Freeview/Saorview channels, connect the RF input from the TV to your outdoor Digital TV aerial. If you do not wish to receive Freeview/Saorview, skip this step.


3 Powering On the TV

 TV Control Stick

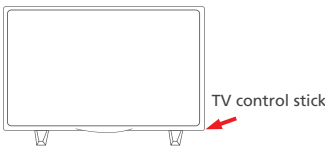

Switch on the television by pressing the TV control stick located on the TV set.

 Remote Control: Installing Batteries

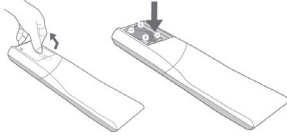

Insert the batteries supplied into the remote control and press the standby button to power on the TV.



To receive Freeview channels, in particular Freeview HD channels, you will need a Digital TV aerial and be in a good Freeview coverage area. You can check coverage for your postcode at www.freeview.co.uk.

Please note that any Freeview HD channels found during tuning will be placed in channel positions above 100. For example, 101 (BBC1 HD) 102 (BBC2 HD) etc.

Win a SHARP Soundbar

Register your manufacturers guarantee online within 14 days of purchase at www.registertoday.co.uk/sharp and enter into a prize draw to win a Sharp Soundbar

Terms and conditions apply. Online registration only.



Wall Mounting the TV

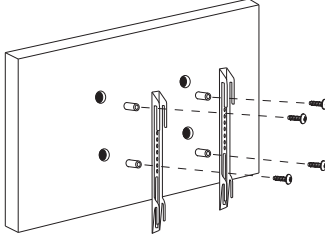 


Image for illustration only. For the dimensions of the VESA mounting, please refer to the Technical Specifications section of this document.

1. Remove the four screws that are supplied in the wall mounting holes.
2. The wall mount can now be easily attached to the mounting holes on the rear of the TV.
3. Install the wall mounting bracket to the television as advised by the bracket manufacturer.

The picture shows the use of spacers, which are not applicable to all sets/installations.

 
4 First time installation




1. Languages
Select your preferred on screen display language. This will change the language in which the menus and associated information is displayed in. When set up has been completed, this can be changed by selecting Menu > Settings > Language




2. Country Selection
Select the correct flag for the country in which the set will be used in. This will enable the set to correctly install the functions applicable in the country of use.

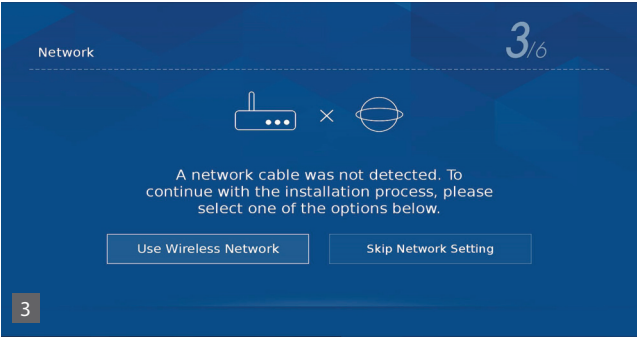

 
3. Network setup You can connect the TV to your broadband router or wireless network in order to take advantage of the Smart functions. If you connect the TV to your router using an Ethernet cable (recommended) this step will be skipped. Follow the on screen prompts to connect to your wireless network. You can set up the Network connection later in the network menu.

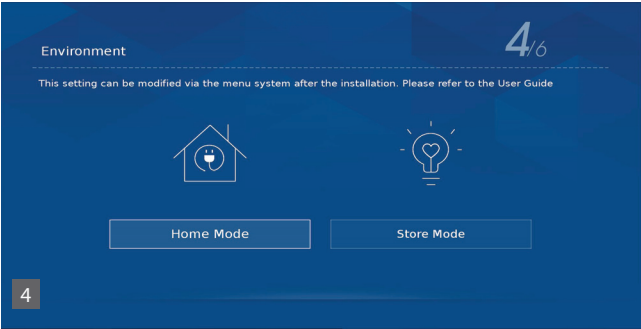

 4. Environment of Use
Home Mode: For normal use, by default it is set to a power saving mode which reduces the energy used by up to 25% (by reducing the power to the LED/LCD panel). This can be changed in the picture mode settings.
NOTE: In Home Mode, the TV will switch itself to the standby mode after 4 hours in the event that the buttons on the remote control or TV set are not used.
Store Mode: For store display use. The picture is adjusted to optimum settings. The store demonstration will appear on the screen automatically after two minutes.

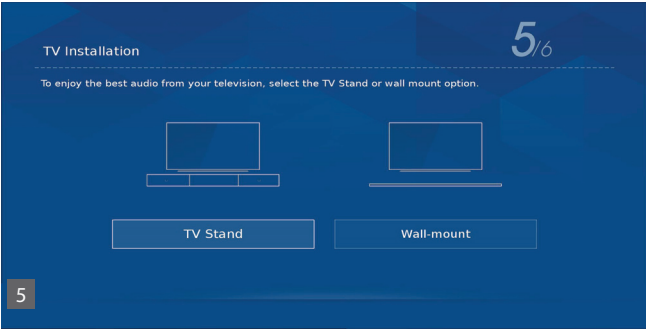


 5. TV Installation – Audio.
Depending on how you use / install your TV, select the appropriate setting. The sound settings on the TV will adjust to suit the type of installation.

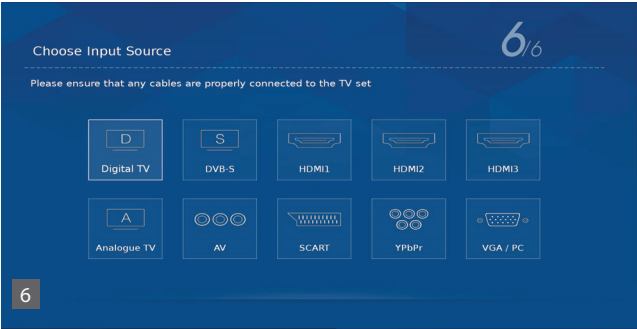

6. Default Source
Select the source which you use the most. If Digital TV (Freeview) is chosen, then at the next step, the set will tune in and default to Digital TV (Freeview). If one of the other sources is selected, then the set will not tune in at this stage and default to that input. If it is required to tune the set in later, this can be achieved by selecting Menu > Channels

 Connectivity

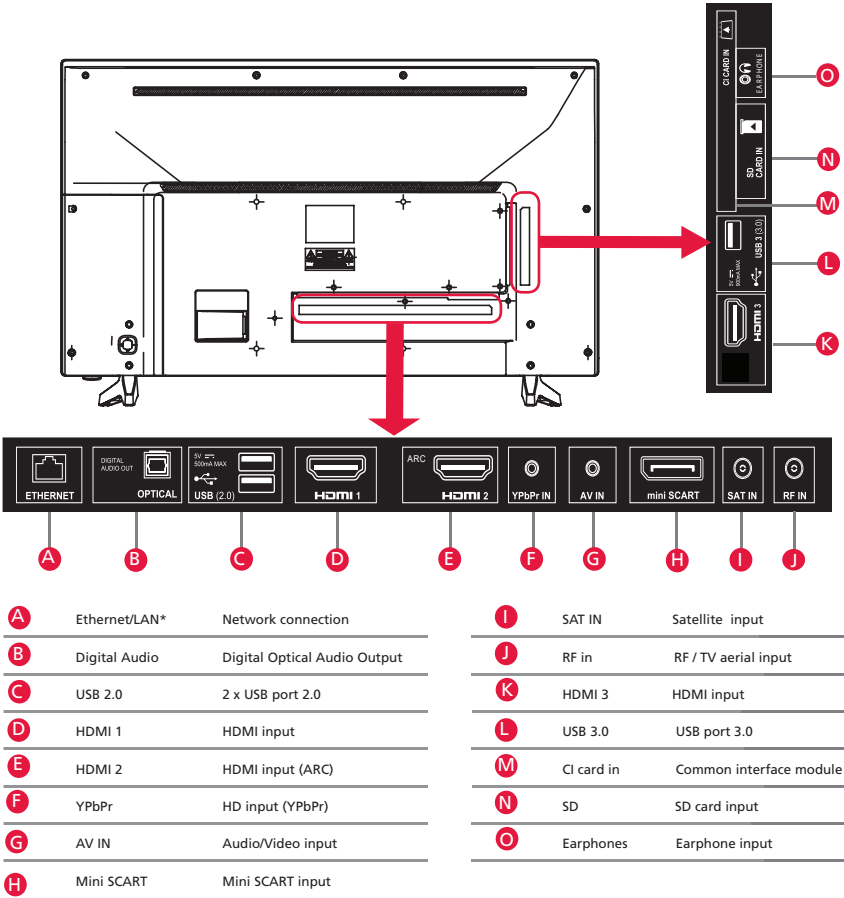

* The Ethernet/LAN port is used for Freeview HD services and smart functions.