



QUICK START GUIDE

Quick Start Set Up Guide. For full instructions please refer to the user guide (available to download from the website).

For stand/feet installation, there is one type of screw provided as shown below.


To complete the stand installation you will require a cross head screw driver.

Place the TV set on a flat and clean surface with the panel facing downwards to avoid damage.




Used for attaching the stand to the TV set (fig.2)

TV panel must be facing downwards.

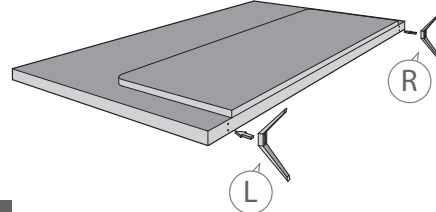


1

TV panel must be facing downwards.

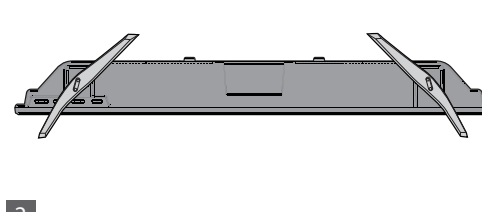


2

TV panel must be facing downwards.

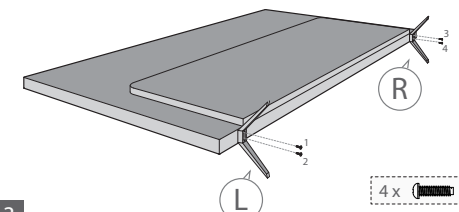


3

 
- (fig.1)** Place the TV set on a flat and clean surface with the panel facing downwards to avoid damage, then fix the stand/feet shown. **The feet are marked L (left) and R (right).** **(fig.2)** When the stand feet are installed correctly, the stand/feet will be angled away from each other at the front of the TV set. **(fig.3)** Secure the stand/feet to the underside of the TV set using the 4 screws provided.



- Using the RF cable supplied, connect the TV to the TV Aerial wall socket. Connect the power cable to the electrical outlet.

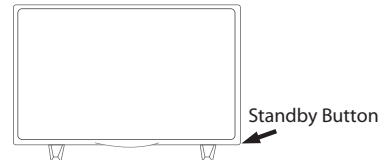

- The TV should power on automatically once the TV is connected to the mains. In the event this does not happen, please refer to the 'Pairing the remote control' section of the QSG.

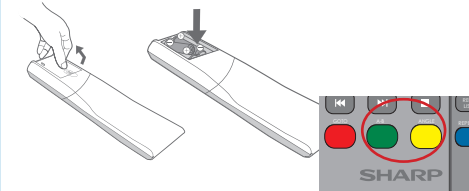

- Insert the batteries supplied into the remote control. The remote control should automatically be paired with the TV set. If this is not the case, please refer to the 'Pairing the remote control' section of the QSG.




To receive Freeview channels, in particular Freeview HD channels, you will need a Digital TV aerial and be in a good Freeview coverage area. You can check coverage for your postcode at www.freeview.co.uk.

Please note that any Freeview HD channels found during tuning will be placed in channel positions above 100. For example, 101 (BBC1 HD) 102 (BBC2 HD) etc.

Pairing the remote control

- If the TV turns on automatically and the first time installation screen appears but the TV does not react to remote control, press and hold the centre two coloured buttons at the bottom of the remote control for a few seconds. The power light will blink 5 times to confirm the TV and remote control are paired.
- If the TV does not automatically turn on you will need to turn the TV on using the standby button on the TV set (*not the remote control*), once switched on, press the standby button on the TV set once, this will prompt the 'pairing menu' to appear, scroll through and highlight 'Pair your remote' by pressing the **CH+/CH-** TV button (scroll up/down function in the menu) then press the TV set's **standby** button (OK function in the menu) to confirm your selection, then with the remote control, press and hold the centre two coloured buttons at the bottom of the remote control a few seconds, the power light will blink 5 times to confirm the TV and remote control are paired.

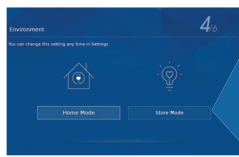


HOME MODE is the mode for end users, by default it is set to a power saving mode which reduces the energy used by up to 25% (by reducing the power to the LED/LCD panel). This can be changed in the picture mode settings in the TV operation menu.

When in **STORE MODE** the picture is adjusted to a brighter setting. The shop demonstration will appear on the screen automatically after 2 minutes.

NOTE: In Home Mode, the TV will switch itself to Standby mode after 4-5 hours in the event that the TV buttons or remote control buttons are not pressed.

- You will be welcomed with the first time installation screen. Select your chosen options and press OK on the remote control and tuning will begin.

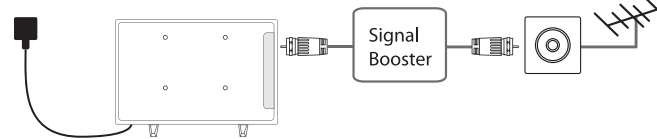

- If the TV finds some, but not all of the channels you would expect to receive, the signal being received by the TV is inadequate. In most circumstances this can be corrected with the simple addition of a Signal Booster between the TV and the TV aerial wall socket, as shown. Once the signal booster is connected, retune the TV in order to receive all of the channels.

Hotline: UK. 0330 024 0803 ROI. 01443 3940 | Internet: www.umc-uk.co.uk

Model Number: LC-32CFG6241KF, LC-32CFG6242KF, LC-32CHG6241KF, LC-32CHG6242KF, LC-40CFG6241KF, LC-40CFG6242KF, LC-43CFG6241KF, LC-43CFG6242KF, LC-49CFG6241KF, LC-49CFG6242KF, LC-55CFG6241KF, LC-55CFG6242KF

UK: Calls are charged at your normal telephone call rate. ROI: Calls are charged at a local rate.



SHA/QSG/0073

SHARP